


RAIL WEAR GAUGE

For use with rail weight of 85AS, 90RA, 100RA, 100RE, 112, 115, 119, 132, 133, 136, & 141

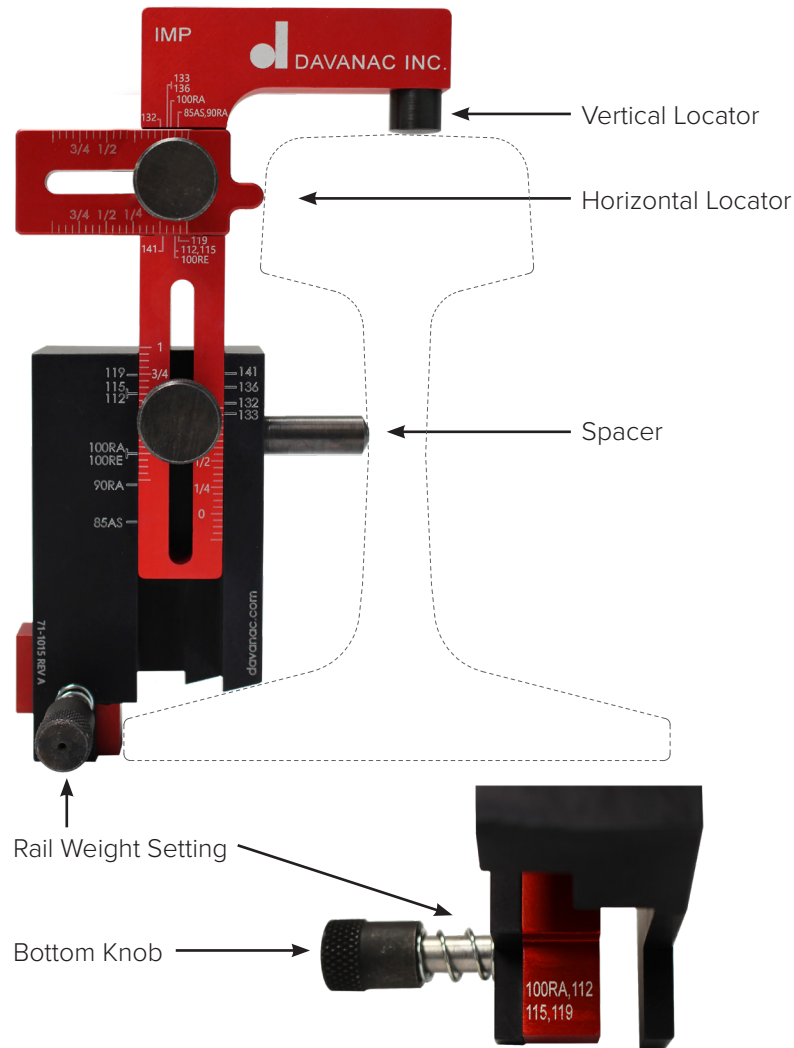

Instructions for use

Step 1: Push back and rotate bottom knob until correct rail weight setting is displayed.

Step 2: Loosen the other 2 knobs and sit gauge on the rail as shown. Gauge should sit on rail, rail should be in contact with locators. Tighten Knobs.

Step 3: Measurements aligned with rail weight demarcations specify rail wear.

71-1015 - GAUGE, RAIL HEAD WEAR, **IMPERIAL** SCALE, 85-141 LBS, DIAL CONCEPT