


# RAIL WEAR GAUGE

For use with rail weight of 85AS, 90RA, 100RA, 100RE, 112, 115, 119, 132, 133, 136, & 141

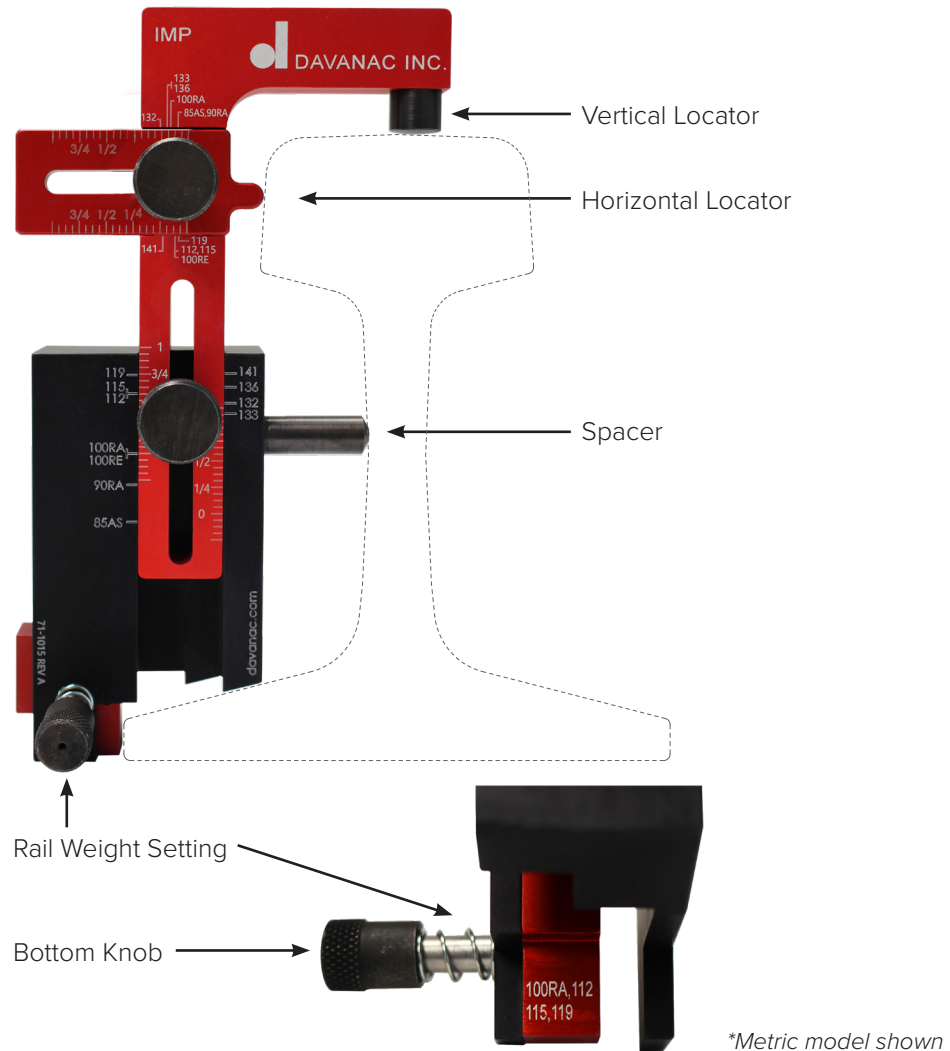

## Instructions for use

**Step 1:** Push back and rotate bottom knob until correct rail weight setting is displayed.

**Step 2:** Loosen the other 2 knobs and sit gauge on the rail as shown. Gauge should sit on rail, rail should be in contact with locators. Tighten Knobs.

**Step 3:** Measurements aligned with rail weight demarcations specify rail wear.

**71-1010** - GAUGE, RAIL HEAD WEAR, **METRIC** SCALE, 85-141 LBS, DIAL CONCEPT

**71-1015** - GAUGE, RAIL HEAD WEAR, **IMPERIAL** SCALE, 85-141 LBS, DIAL CONCEPT